


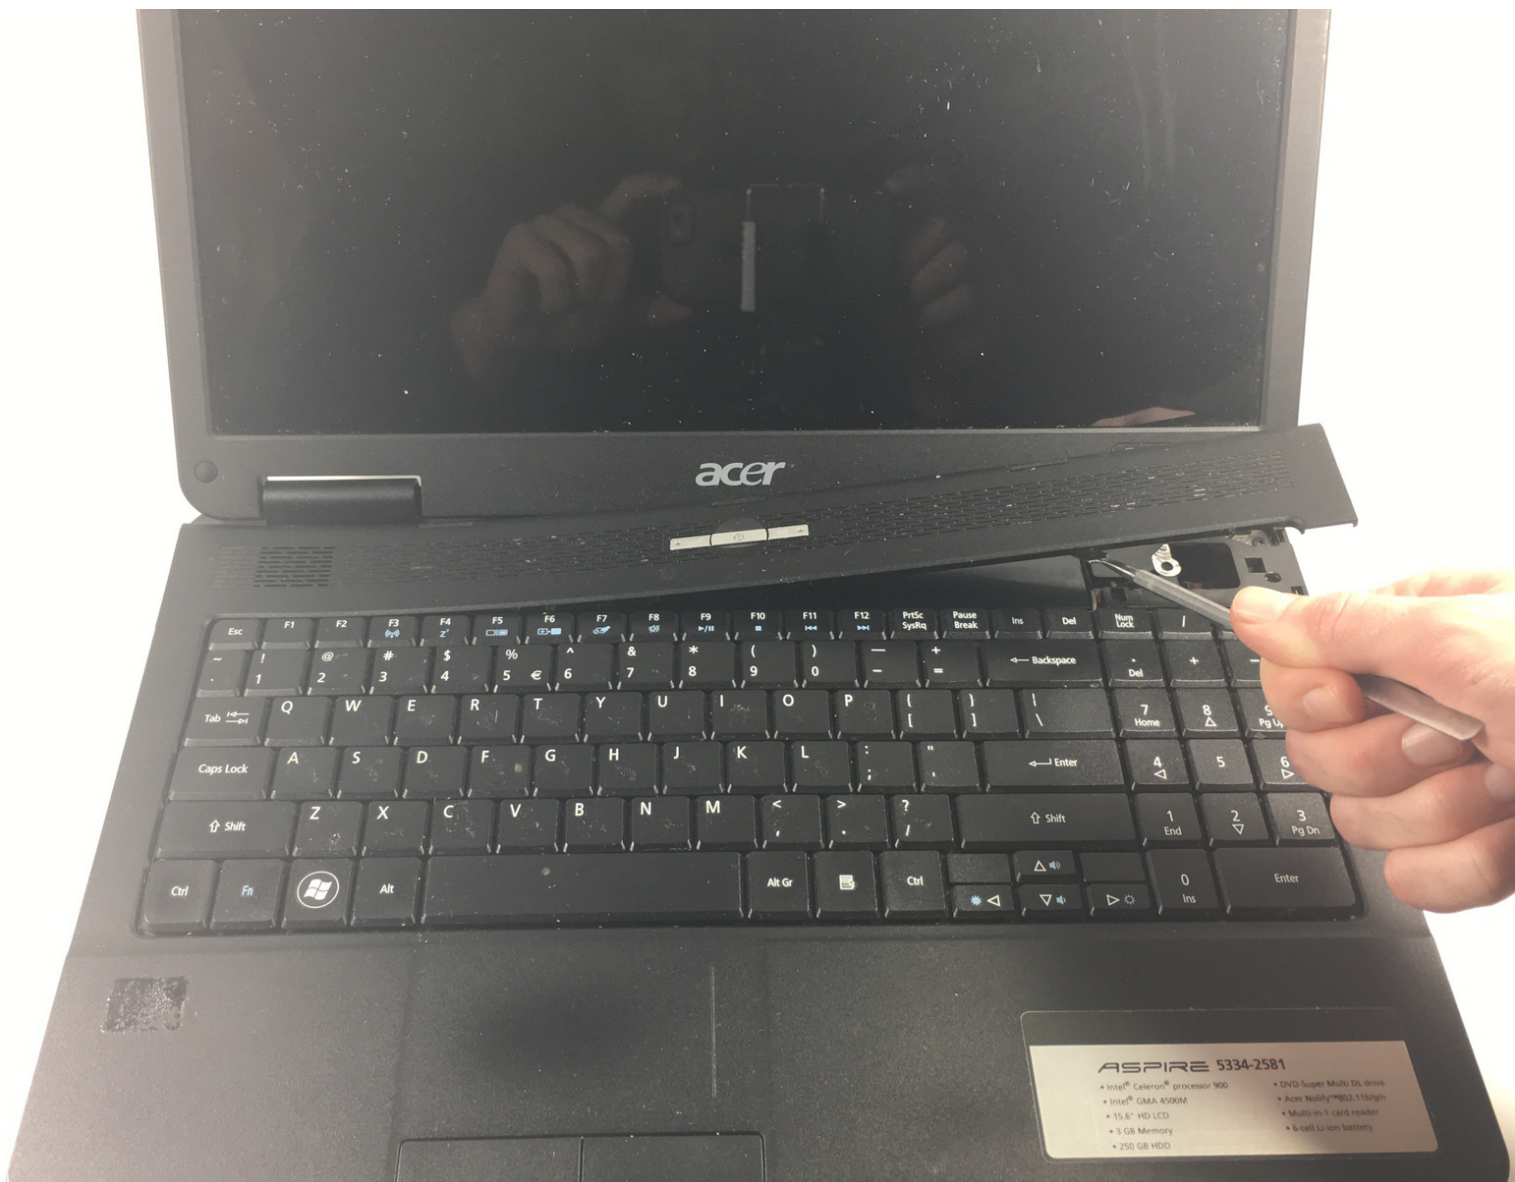

# Acer Aspire 5334-2581 Keyboard Replacement

This guide will show how to change the keyboard on your Acer Aspire 5334-2581.

Written By: gilson teixeira



## INTRODUCTION

The keyboard on your Acer Aspire will be easy to remove, The keyboard performs a special function on your laptop.


---



### TOOLS:

- [Metal Spudger](#) (1)
-

## Step 1 — Battery

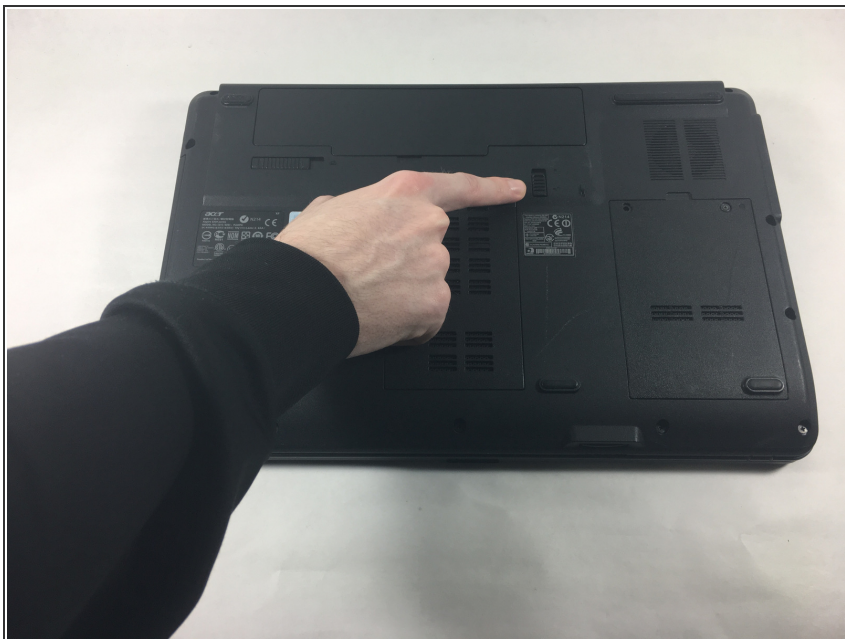


- Please make sure your device is unplugged . Turn it over slowly, and place it on a flat surface.

## Step 2




- This latch holds your battery in place, it should always be locked. Make sure to unlock this piece.

 Do not break this latch, otherwise your battery will not hold in place.



## Step 3

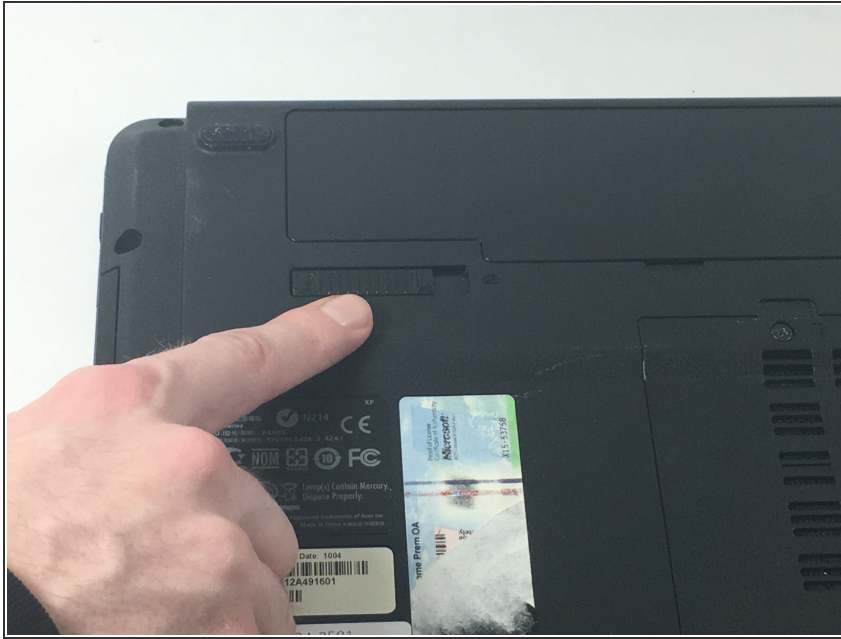


- Locate the eject latch and push it so the battery can come out.
- The battery will lift up once you have pushed the latch.
- ☑ You DO NOT need to adjust the latch when replacing the new battery, because it just snaps in place.

## Step 4



- Lift the battery up, and it should just come right off. You should see the label with the part number.

## Step 5 — Keyboard

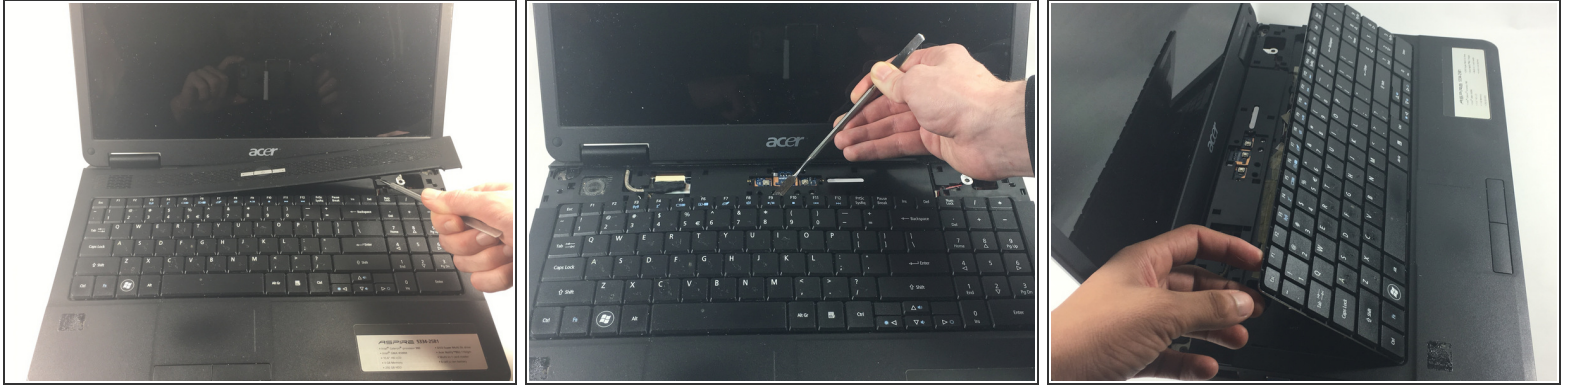


- The keyboard is held underneath a plastic cover. remove this cover with a spudger.
- Using a spudger, apply it underneath the keyboard and lift it up.

## Step 6



- Disconnect the keyboard flex cable, and now you are ready to install a new keyboard.

 Take extra care, and try not to break the the latch that holds the cable in place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 11:14:43 AM.